Quick guide
Nokia 106

TA-1564 /TA-1571
EN-Global

7101001890000 V1.0

For your safety

Read these simple guidelines. Not following them may be dangerous or against local laws and regulations. For further information, read the complete user guide.

SWITCH OFF IN RESTRICTED AREAS
Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all instructions in restricted areas.

ROAD SAFETY COMES FIRST
Obey all local laws. Always keep your hands free to operate the vehicle when driving. Your first consideration while driving should be road safety.

INTERFERENCE
All wireless devices may be susceptible to interference, which could affect performance.

AUTHORIZED SERVICE
Only authorized personnel may install or repair this product.

BATTERIES, CHARGERS AND OTHER ACCESSORIES
Use only batteries, chargers, and other accessories approved by HMD Global for use with this device. Do not connect incompatible products.

KEEP YOUR DEVICE DRY
Your device is not water-resistant. Keep it dry.

PROTECT YOUR HEARING
To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

Keys and parts

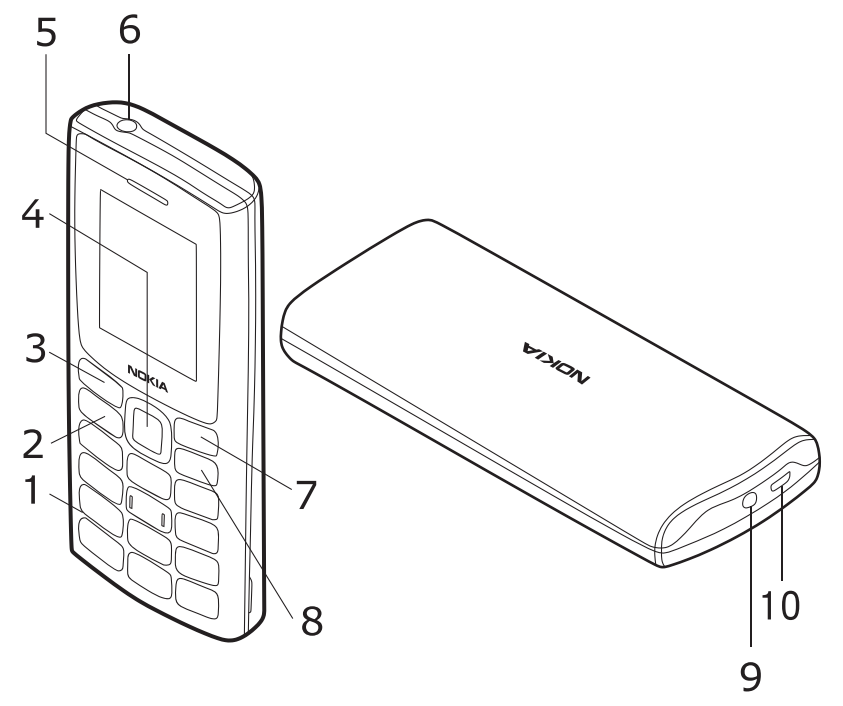

1 Microphone
2 Call key
3 Left selection key
4 Scroll key
5 Earpiece/Loudspeaker
6 Flashlight
7 Right selection key
8 Power/End key
9 Headset connector
10 USB connector

To lock the keys, select **Go to > Lock keypad**.
To unlock the keys ◎, press, and select **Unlock.**

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic stripe cards near the device for extended periods of time, since the cards may be damaged.

Some of the accessories mentioned in this user guide, such as charger, headset, or data cable, may be sold separately.

Note: You can set the phone to ask for a security code. The pre-set code is 12345. Change it to protect your privacy and personal data. To change the code, select **Menu > Settings > Security settings > Change** access **codes> Change security code**, enter the pre-set code 12345, and select **OK.** Then enter a new security code with 5-8 digits. Note, however, that when you change the code, you need to remember the new code, as HMD Global is not able to open or bypass it.

Insert the SIM and memory card

Use only original mini-SIM cards. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.

Use only compatible memory cards approved for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.

Note: Switch the device off and disconnect the charger and any other device before removing any covers. Avoid touching electronic components while changing any covers. Always store and use the device with any covers attached.

1. Put your fingernail in the small slot on the side of the phone, lift and remove the cover.

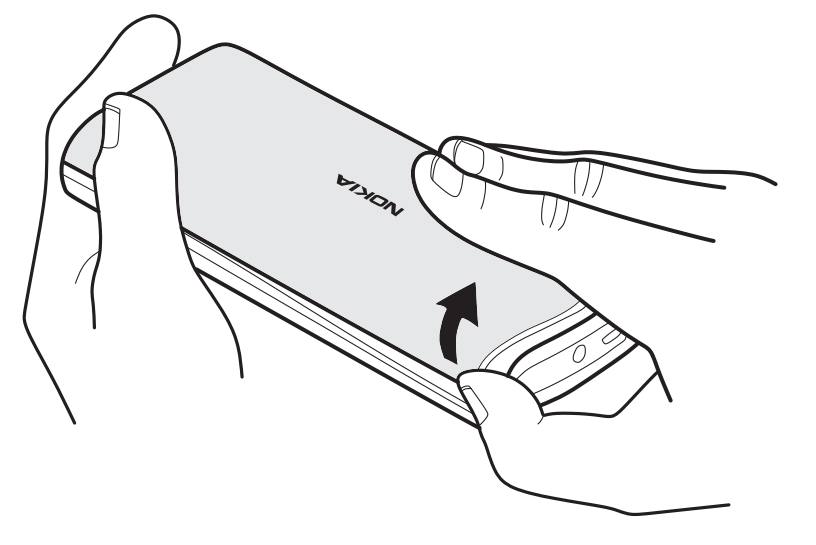

2. If the battery is in the phone, to remove it, lift it out.
3. Slide the SIM card in the SIM card slot.

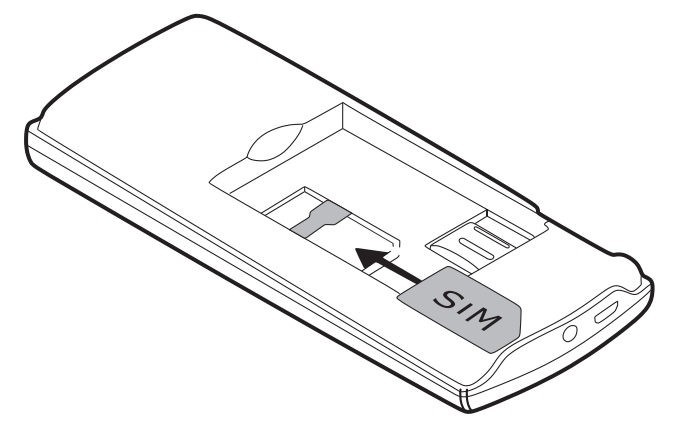

4. If you have a dual-SIM phone, slide the second SIM in the SIM2 slot. Both SIM cards are available at the same time when the device is not being used,but while one SIM card is active, for example, making a c may be unavailable.

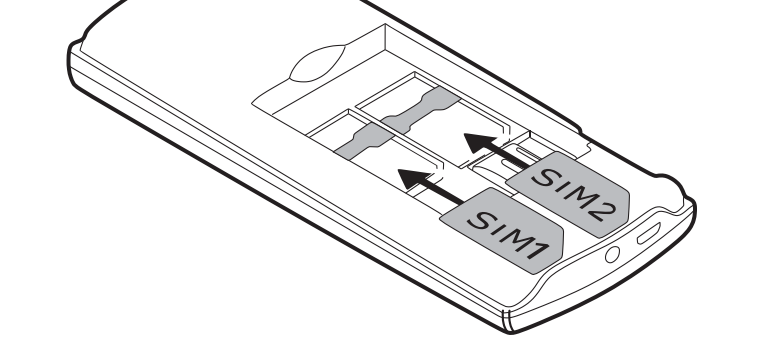

Tip: To find out if your phone can use 2 SIM cards, see the label on the sales box. If there are 2 IMEI codes on the label, you have a dual-SIM phone.

5. To insert the memory card, slide the memory card holder to the right and lift it up. Place the memory card in the memory card slot, close down the holder, and slide it to the left to lock it in place.

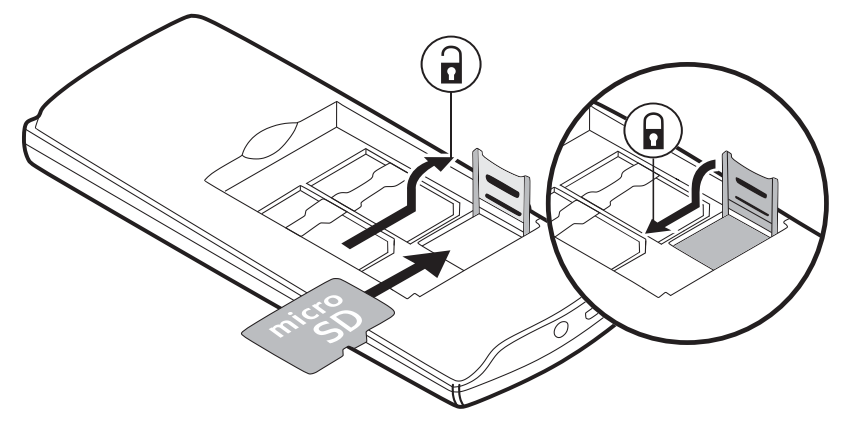

6.Put back the battery.

7.Put back the cover.

Important: Do not remove the memory card when an app is using it. Doing so may damage the memory card and the device and corrupt data stored on the card.

Switch your phone on or off
Press and hold the power key.

Charge the battery
1.Plug the charger into the wall outlet.
2.Connect the charger to the phone. When done, unplug the charger from the phone then from the wall outlet

If the battery is completely discharged, it may take several minutes before the charging indicator is displayed.
Your device has a removable, rechargeable lithium-ion battery. For safe removal of the battery, read the safety information.

Make a call
1.Type in the phone number.
To type in the + character used for international calls press * twice.
2.Press ⌒. If asked, select which SIM to use.
3. To end the call, press ◎.

Answer a call
Press ⌒.

Send messages
1.Select **Messages** > **Create message**.
2.Write your message.
3.Select **Opt.** > **Send**, and type in a phone number, or select a recipient from your contacts list.

You can send text messages that are longer than the character limit for a single message. Longer messages are sent as two or more messages Your service provider may charge accordingly. Characters with accents, other marks, or some language options, take more space, and limit the number of characters that can be sent in a single message.

Find your model number and serial number (IMEI)
If you need to contact your care point or your service provider, you may need info such as the model number and the serial number (IMEI). To see the model number, dial *#0000#. To see the serial number, dial *#06#.
If you have a dual SIM phone, only IMEI1 is needed.You can also find the info on your phone label, which is located under the battery.
The IMEI is also visible on the original sales box.

Product and safety info
For info on HMD Global Privacy Policy, go to www.nokia.com/phones/privacy. For a product-specific online user guide, safety instructions, warranty information, and troubleshooting help, or finding the nearest authorized service facility, go to www.nokia.com/mobile-support.

Note: Pre-installed system software and apps use a significant part of memory space.

Network services and costs
You can use your device on the GSM 900 and 1800 networks. You need a subscription with a service provider.

Maximum transmit power

GSM 900	35 dBm
GSM 1800	32 dBm

Using some features and services, or downloading content, including free items, require a network connection. This may cause the transfer of large amounts of data, which may result in data costs. You may also need to subscribe to some features.

Emergency calls
Important: Connections in all conditions cannot be guaranteed Never rely solely on any wireless phone for essential communications like medical emergencies.
Before making the call:
- Switch the phone on.
- If the phone keys are locked, unlock them.
- Move to a place with adequate signal strength.

1. Press the end key repeatedly, until the home screen is shown.
2. Type in the official emergency number for your present location. Emergency call numbers vary by location.
3. Press the call key.
4. Give the necessary info as accurately as possible. Do not end the call until given permission to do so.

You may also need to do the following:
- Put a SIM card in the phone.
- If your phone asks for a PIN code, type in the official emergency number for your present location, and press the call key.
- Switch the call restrictions off in your phone, such as call barring, fixed dialling, or closed user group.

Take care of your device
Handle your device, battery, charger and accessories with care.
The following suggestions help you keep your device operational.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, remove the battery, and let the device dry.
- Do not use or store the device in dusty or dirty areas.
- Do not store the device in high temperatures. High temperatures may damage the device or battery.
- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage it.
- Do not open the device other than as instructed in the user guide.
- Unauthorized modifications may damage the device and violate regulations governing radio devices.
- Do not drop, knock, or shake the device or the battery. Rough handling can break it.
- Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can prevent proper operation.
- For optimal performance, switch the device off and remove the battery from time to time.
- Keep the device away from magnets or magnetic fields.
- To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important info.

Restore original settings
To reset your phone to its original settings and to remove all your data, on the home screen, type in *#7370#

Recycle
Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Electrical and electronic products contain a lot of valuable materials, including metals (such as copper, aluminum, steel, and magnesium) and precious metals (such as gold, silver, and palladium). All materials of the device can be recovered as materials and energy.

Crossed-out wheeled-bin symbol
The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products and batteries must be taken to separate collection at the end of their working life. Remember to remove personal data from the device first. Do not dispose of these products as unsorted municipal waste: take them for recycling. For info on your nearest recycling point, check with your local waste authority, or read about HMD's take-back program and its availability in your country at **www.nokia.com/phones/support/topics/recycle.**

Battery and charger info
Use your device only with an original BL-L5J rechargeable battery. Charge your device with the AC-18 charger. Charger plug type may vary. HMD Global may make additional battery or charger models available for this device.

Battery and charger safety
Once charging of your device is complete, unplug the charger from the device and electrical outlet. Please note that continuous charging should not exceed 12 hours. If left unused, a fully charged battery will lose its charge over time.

Always keep the battery between 15°C and 25°C (59° F and 77°F) for optimal performance. Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily.
Obey local regulations. Recycle when possible. Do not dispose as household waste.
Do not expose the battery to extremely low air pressure or leave it to extremely high temperature, for example dispose it in a fire, as that may cause the battery to explode or leak flammable liquid or gas.
Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.
Use the battery and charger for their intended purposes only.
Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service center or your phone dealer before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Do not charge your device during a lightning storm.
To unplug a charger or an accessory, hold and pull the plug, not the cord.
Additionally, the following applies if your device has a removable battery:
- Always switch the device off and unplug the charger before removing the battery.
- Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object

Small children
Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

Medical devices
Operation of radio transmitting equipment, including wireless phones, may interfere with inadequately shielded medical devices' function. Consult a physician or the medical device's manufacturer to determine if it is adequately shielded from external radio energy.

Implanted medical devices
To avoid potential interference, manufacturers of implanted medical devices (such as cardiac pacemakers, insulin pumps, and neurostimulators) recommend a minimum separation of 15.3 centimeters (6 inches) between a wireless device and the medical device. Persons who have such devices should:
- Always keep the wireless device more than 15.3 centimeters (6 inches) from the medical device.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device.
- Switch the wireless device off if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Hearing
Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.
Some wireless devices may interfere with some hearing aids.

Nickel
The surface of this device is nickel-free.

Vehicles
Radio signals may affect improperly installed or inadequately shielded electronic systems in vehicles. For more info, check with the manufacturer of your vehicle or its equipment.
Only authorized personnel: should install the device in a vehicle. Faulty installation may be dangerous and invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable or explosive materials in the same compartment as the device, its parts. or accessories, Do not place your device or accessories in the air bag deployment area.

Potentially explosive environments
Switch your device off in potentially explosive environments, such as near gas pumps. Sparks may cause an explosion or fire resulting in injury or death. Note restrictions in areas with fuel; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive environment may not be clearly marked. These usually are areas where you are advised to switch your engine off, below deck on boats, chemical transfer or storage facilities, and where the air contains chemicals or particles. Check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) if this device can be safely used in their vicinity.

Certification information (SAR)
This mobile device meets guidelines for exposure to radio waves as set forth by the Council of Europe (CE). Refer to the following
European RF Exposure Information
Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health .The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W/kg and the highest SAR value for this device when tested at the ear is **0.558 W/kg***. As mobile devices offer a range of functions, they can be used in other positions, such as on the body In this case, the highest tested SAR value is **1.023 W/kg***at the separation distance of 0.5 cm from the body. For electronic safety maintain the separation distance with accessories containing no metal, that position handset a minimum of the above distance. Use of other accessories may not ensure compliance with RF exposure guidelines.
* The tests are carried out in accordance with international guidelines for testing.

About Digital Rights Management
When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights. Copyright protection may prevent you from copying, modifying, or transferring photos, music, and other content.

Copyrights and other notices

EU Declaration of Conformity
Hereby, HMD Global Oy (Ltd.)declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. A copy of the EU Declaration of Conformity can be found at https://www.nokia.com/en_int/phones/declaration-of-conformity.

UK Declaration of Conformity
Hereby,HMD Global Oy declares that this product is in compliance with the essential requirements and other relevant provisions of Radio Equipment Regulations 2017 (S.1. 2017/1206.) A copy of the UK Declaration of Conformity can be found at https://www.nokia.com/en_int/phones/declaration-of-conformity.

Manufacturer and/or importer in EU: HMD Global Oy, Bertel Jungin aukio 9, 02600 Espoo, Finland.
Importer in UK: HMD Global Oy UK Branch4 Kingdom Street Level 4, London, Paddington Central, W2 6BD, United Kingdom.
HMD Global Privacy Policy, available at http://www.nokia.com/phones/privacy, applies to your use of the device.
© 2023 HMD Global. HMD Global Oy is the exclusive licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation.
This product includes open source software.For applicable copyright and other notices, permissions, and acknowledgements, select *#6774#on the home screen.

Manufacturer's limited warranty

1. General
HMD Global Oy (hereinafter "Manufacturer") provides this Manufacturer's Limited Warranty ("Warranty") for each genuine device (the "Product") and related Accessories (as defined in Section 2) included with the Product sales package.
This Warranty is only applicable in the country or region where the Product was purchased through Manufacturer's authorised sales channels, provided that the Product was intended for sale in that country or region ("Covered Country or Region"). The warranty services available in a particular Covered Country or Region may be limited to the Products and country-specific elements available for sale in that Covered Country or Region.
This Warranty covers and includes any statutory rights under any mandatory consumer protection laws of the Covered Country or Region applicable to you and may also grant you additional rights where permissible under applicable law. This Warranty does not limit the rights you may have under applicable law and you ray have other rights based on local laws during or after the Warranty period. These rights are not excluded by this Warranty.
The Product and its Accessories must be used in accordance with the instructions provided in the user guides and leaflets that come in the Product package and are also available online. From time to time the Manufacturer may offer additional warranty coverage that supplements the terms listed here. Tolearn more about your Product and any additional coverage, please visit www.nokia.com/mobile-support.

2. Warranty
The Warranty period starts on the date the Product is sold to an end user for the first time, as evidenced by the original proof of purchase.
A. The Manufacturer warrants that the Product (including non-user replaceable batteries) purchased in the Covered Country or Region is free from defects in materials and workmanship ("Defect") for twelve (12) months except for Products purchased in the following Covered Country or Region where the Warranty period is twenty-four (24) months:
Australia, European Union member states, Iceland, Liechtenstein, Moldova, Montenegro, New Zealand, North Macedonia, Norway, Saudi Arabia, Serbia, Switzerland, and Turkey and United Kingdom.
B. The Manufacturer warrants that the Accessories (defined as user-replaceable batteries, covers, cables, chargers, headsets and any other accessory included in the sales package) are free from Defect for six (6) months in the Covered Country or Region.
During the Warranty period, any Defect covered by this warranty will, in a reasonable time, be remedied free of charge by either repairing or replacing the defective Product or Accessory or the defective part of it at its option, provided that you have returned the defective Product.or Accessory to the original point of purchase (or Manufacturer or its authorised service centre, as specified from time to time) before the Warranty period has expired.
When repairing or replacing your Product or Accessory, the Manufacturer may use new or re-conditioned parts or provide a refurbished replacement Product or Accessory except where the use of such re-conditioned parts or refurbished Product or Accessory is prohibited by local law. in case local law requires the end user to be informed about the use of re-conditioned parts or refurbished Products or Accessories, this Warranty document constitutes the necessary notice in that regard. In case local law requires consent from the end user for the use of re-conditioned parts or refurbished Products or Accessories, then such parts or Products or Accessories will not be used until such consent has been obtained.
When making a Warranty claim, you must provide the legible and original proof of purchase, clearly indicating the name and the address of the point of purchase, the place and date of purchase, the Product type and the serial number together with the defective Product or Accessory to the original point of purchase (or Manufacturer or its authorised service centre, as specified from time to time).
To the fullest extent permitted by applicable law:
(i) No repair or replacement willrenew or extend the original Warranty period unless such renewal or extension is mandated by local law, in which case the Warranty period is extended by the minimum time required by law;
(ii) For countries where such renewal or extension is not mandated by local law., the original Product, replacement parts or replacement Products or Accessories provided under this Warranty will be covered by this Warranty for the remainder of the original Warranty period or for sixty (60) days from the date the repaired or replacement Product or Accessory is returned to you, whichever is longer; and
(iii) Where the Product, Accessory or parts of a Product or Accessory have been replaced, the original Product, parts, or Accessories shall become the Manufacturer's or retailer's property.
Please always back up and remove all personal data, programs, applications, and content stored on your Product before taking your Product in for service since repair activities will erase all data from your Product. If your product is replaced, the data, programs, applications, and content stored on your Product will not be transferred to the replacement Product. Remove any confidential information prior to submitting your Product for service. Manufacturer, its authorised service centres and retailers are not responsible for the loss of the your data, programs, applications, or content,

3. What this Warranty does not cover
This Warranty excludes all of the following:
(i) Errors or damages caused by:
(a) exposure to liquid or dampness (unless the Productis declared to be water-resistant under certain conditions as specified by the Manufacturer), damage Caused by exposure to extreme electromagnetic field (such as damages caused by microwave oven), or extreme thermal or environmental conditions or to rapid changes in such conditions, corrosion, oxidation, spillage of food or liquid, or influence from chemical products;
(b) physical damage, cracks, dents or scratches caused by a drop or by external forces impacting the Product or any part of the Product including but not limited to the cover, display, camera lenses and buttons (unless specified otherwise by the Manufacturer under certain conditions);
(c)using your Product with, or connecting it to, any product, accessory, software, or service not manufactured, authorised, or supplied by Manufacturer; or chargers, power adaptors or data cables which do not meet the required technical and safety specifications described in the user guide;
(d)any third-party products sold in combination with your Product;
(e)damage or errors caused by hacking, cracking, viruses, or other malware, or by unauthorised access to services, accounts, computer systems, or networks;
(f) power outages or surges capable of affecting the tne normal use of the Product; or
(g) other acts beyond the Manufacturer's reasonable control.
(ii) Any wear and tear;
(iii) Use of your Product in a manner that does not comply with its intended use and the provisions of the user guide;
(iv) If your Product, has been opened, repaired or modified by non-authorised third parties, or repaired using unauthorised spare parts;
(v) If you have not installed the latest software updates that are publicly available for your Product within a reasonable time of their release.
Manufacturer does not warrant that software preinstalled by or on behalf of Manufacturer in the Product (or subsequent updates and upgrades) (together "Manufacturer Software") will meet your requirements, work in combination with any hardware or software not provided by Manufacturer, be uninterrupted or error free or that errors are correctable or will be corrected. For Manufacturer Software-related errors, Manufacturer will make available the latest version of the Manufacturer Software for reinstallation on your Product or, if that would not be possible, another remedy, which in Manufacturer's reasonable discretion, satisfactorily addresses the error. Some Manufacturer Software may be subject to separate license terms that are available with the software.
This Warranty is not valid outside of the Covered Country or Region and does not cover: (a) User guides; (b) Any third party software, settings, content, data, or links installed or downloaded onto your Product at any time, or Manufacturer and third-party services or enabling clients even if preinstalled by Manufacturer (please read the terms and conditions that may accompany the services as those will define your rights and obligations); (c) Reduced charging capacity of the battery resulting from its natural end of Product life, or pixel defects in your Product's display that are within the scope of industry standards; (d) SIM card and/or any cellular or other networks or system on which your Product operates, and (e) A Product where the serial number, the mobile accessory date code, or the IMEI number has been removed, erased, defaced, altered or if these are illegible in any way.
You cannot enforce this Warranty if you refuse to return the Product or Accessory to the original point of purchase or Manufacturer for investigation.
If this Warranty does not cover your Product or Accessory based on the above, the retailer, Manufacturer or its authorised service centre reserves the right to charge for the repair or replacement of your Product or Accessory following your consent, as well charging a handling fee.

4. Limitation of Manufacturer's liability
TO THE EXTENT PERMITTED BY APPLICABLE LAW(S), MANUFACTURER SHALL NOT UNDER ANY CIRCUMSTANCES BE LIABLE, EITHER EXPRESSLY OR IMPLIEDLY, FOR ANY
(i)DAMAGES OR LOSSES OF ANY KIND WHATSOEVER RESULTING FROM OR RELATING TO LOSS OF, DAMAGE TO, OR CORRUPTION OF, CONTENT OR DATA OR THE RECREATION OR TRANSFER THEREOF EVEN IF SUCH LOSS, DAMAGE, OR CORRUPTION WAS A RESULT OF A DEFECT IN YOUR PRODUCT OR ACCESSORY; AND/OR
(ii) LOSS OF PROFIT, USE, PRODUCTIVITY, BUSINESS, CONTRACTS, REVENUES OR ANTICIPATED SAVINGS, INCREASED COSTS OR EXPENSES, OR FOR ANY INDIRECT, CONSEQUENTIAL OR SPECIAL LOSS OR DAMAGE.
To the extent permitted by applicable law, Manufacturer's liability shall be limited to the purchase value of your Product or Accessory, as applicable.

5. Other important notices
Manufacturer reserves the right to make changes to the location and availability of its authorised service centres network at any time.
Your Product may contain specific elements which may not operate as intended when used outside of the original country of purchase.

6. Additional Warranty Previsions for Products and Accessories purchased in Australia and New Zealand
Australia. Our Product comes with guarantees that cannot be excluded under the Australian Consumer Law You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage You are entitled to have the Product repaired or replacerd if the Product fails to be of acceptable quality and the failure does not amount to a major failure.

Support available at
www.nokia.com/mobile-support
Contact Number: +61730628463

New Zealand, Our Product comes with consumer guarantees that cannot be excluded under the Consumer Guarantees Act 1993 (NZ). You are entitled to a replacement or refund for a failure of substantial character and for compensation for any other reasonably foreseeable loss or damage You are entitled to have the Product repaired or replaced if the Product fails to be of acceptable quality and the failure does not amount to a failure of substantial character Where the Product was supplied to you for business purposes. consumer guarantees under the Consumer Guarantees Act 1993 (NZ) will not apply.

Support available at
www.nokia.com/mobile-support.
You will need to deliver your Product to the Manufacturer's authorised service centre at your own cost. If you visit the Manufacturer's authorised service centre for assistance under this Warranty, please remember to bring along a copy of the original proof of purchase, which should clearly indicate the words "Tax Invoice" or the equivalent, and include the name and ABN number (Australia) or GST number (New Zealand) of the seller, the date of purchase, a description of the product purchased, and the IMEI or other serial number of the Product.

Manufacturer's Address: HMD Global Oy, Bertel Jungin aukio 9, 02600 Espoo, Finland

راهنمای سریع
Nokia 106

TA-1564 /TA-1571
FA

7101001892000 V1.0

برای ایمنی شما

این دستورالعمل های ساده را مطالعه کنید. عدم رعایت این دستورالعمل ها ممکن است خطرآفرین یا برخلاف قوانین و ضوابط محلی باشد. جهت کسب اطلاعات بیشتر راهنمای کامل کاربر را مطالعه کنید.

در مناطق ممنوعه دستگاه را خاموش کنید
در مواردی که استفاده از گوشی تلفن همراه ممنوع است، یا زمانی که ممکن است باعث ایجاد اختلال یا خطر گردد، برای مثال در هواپیما، بیمارستان ها یا نزدیك تجهیزات پزشکی، مواد سوختنی، مواد شیمیایی یا مکان‌هایی که در آن امکان انفجار وجود دارد، دستگاه را خاموش کنید. همه دستورالعمل ها را در مناطق ممنوعه رعایت کنید.

ایمنی در جاده، در درجه اول اهمیت قرار دارد
همه قوانین محلی را رعایت کنید. هنگام رانندگی همیشه دستان خود را برای هدایت وسیله نقلیه آزاد بگذارید. اولین نکته ای که باید هنگام رانندگی مورد توجه قرار گیرد ایمنی در جاده است.

تداخل
همه دستگاه های بی سیم ممکن است در معرض تداخل امواج قرار گیرند، این مسئله ممکن است بر کارکرد آنها تأثیر بگذارد.

خدمات مجاز
فقط افراد متخصص مجاز به نصب یا تعمیر دستگاه می باشند.

باتری ها، شارژرها و لوازم جانبی دیگر
فقط از باتری ها، شارژر ها و سایر لوازم جانبی مورد تأیید HMD Global به همراه این دستگاه استفاده کنید. محصولات ناسازگار را به دستگاه وصل نکنید.

دستگاه خود را خشك نگه دارید
دستگاه شما ضد آب نیست. دستگاه را همواره خشك نگه دارید.

از شنوایی خود محافظت کنید
جهت جلوگیری از آسیب دیدگی های احتمالی شنیداری، برای مدت زمان طولانی با صدای بلند به چیزی گوش ندهید. وقتی از بلندگو استفاده می کنید و درعین حال دستگاه نزدیك گوشتان است، احتیاط کنید.

کلیدها و قطعات

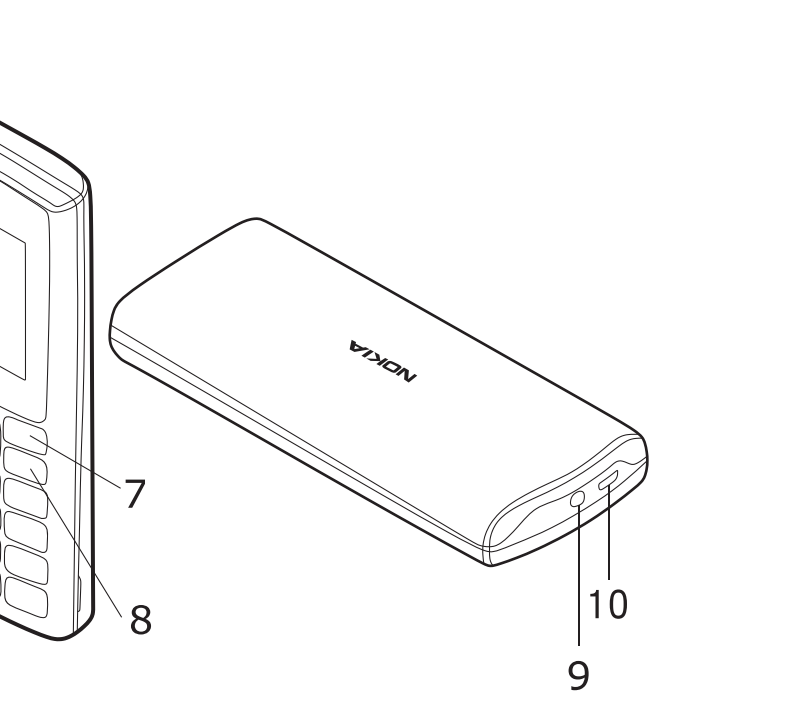

1 میکروفن
2 کلید تماس
3 کلید انتخاب سمت چپ
4 کلید پیمایش
5 گوشی/بلندگو
6 چراغ قوه
7 کلید انتخاب سمت راست
8 دکمه خاموش/روشن/پایان
9 رابط هدست
10 رابط USB

برای قفل کردن کلیدها، **برو به> قفل صفحه کلید** را انتخاب کنید.
برای بازگشایی قفل کلیدها،◎ را فشار دهید و **بازکردن قفل** را انتخاب کنید.
به محصولاتی که سیگنال خروجی ایجاد میکنند وصل نشوید، زیرا ممکن است به دستگاه آسیب برسانند.

هیچ گونه منبع ولتاژ را به رابط صوتی وصل نکنید. در صورت اتصال دستگاه خارجی یا هدست به رابط صوتی، به غیر از آن هایی که جهت استفاده با این دستگاه مورد تأیید قرار گرفته اند، به میزان‌صدای دستگاه توجه ویژه ای داشته باشید.

قطعات دستگاه خاصیت آهنربایی دارند. ممکن است دستگاه اشیای فلزی را جذب کند. کارت های اعتباری یا سایر کارت های دارای نوار مغناطیسی را برای مدت زمان طولانی نزدیك دستگاه قرار ندهید، زیرا ممکن است کارت ها آسیب ببینند.

برخی لوازم جانبی ذکرشده در این دفترچه راهنمای کاربر، از قبیل شارژر، هدست یا کابل داده ها، ممکن است به صورت جداگانه به فروش برسند.

توجه: میتوانید تلفن را به گونه ای تنظیم کنید، که کد امنیتی را درخواست کند. کد از پیش تنظیم شده ۱۲۳۴۵ است. برای محافظت از داده های شخصی و حریم خصوصی تان آن را تغییر دهید. برای تغییر کد، **فهرست>تنظیمات > تنظیمات امنیتی>تغییر کدهای دستیابی> تغییر کد امنیتی**، را انتخاب کنید و کد امنیتی از پیش تنظیم شده12345 را وارد و **تأیید** را انتخاب کنید. یك کد امنیتی جدید 5-8 رقمی وارد کنید. با این وجود توجه کنید که وقتی کد را تغییر می دهید، باید کد جدید را به خاطر بسپارید، زیرا HMD Global نمی تواند این کد را باز کند یا از آن عبور کند.

سیم کارت و کارت حافظه را وارد کنید

فقط از مینی سیم کارت های اصلی استفاده کنید. استفاده از سیم کارت های ناسازگار ممکن است باعث آسیب دیدن کارت یا دستگاه شود و ممکن است داده های ذخیره شده روی کارت را مخدوش کند.

فقط از کارتهای حافظه سازگار و مورد تایید برای کار با این دستگاه استفاده کنید. کارتهای ناسازگار ممکن است باعث آسیب دیدن کارت و دستگاه شوند و داده های ذخیره شده روی کارت را مخدوش کنند.

توجه: قبل از خارج کردن هر نوع درپوشی، ابتدا دستگاه خاموش کنید و شارژر و همه دستگاه های دیگر را از آن جدا کنید. هنگام تعویض قاب، از تماس با اجزاء الکترونیکی خودداری کنید. همیشه دستگاه را همراه با درپوش های متصل به آن نگهداری و استفاده کنید.

۱. ناخن انگشتتان را در شکاف کوچك کنار تلفن قرار دهید، و قاب را بلند کنید و بردارید.

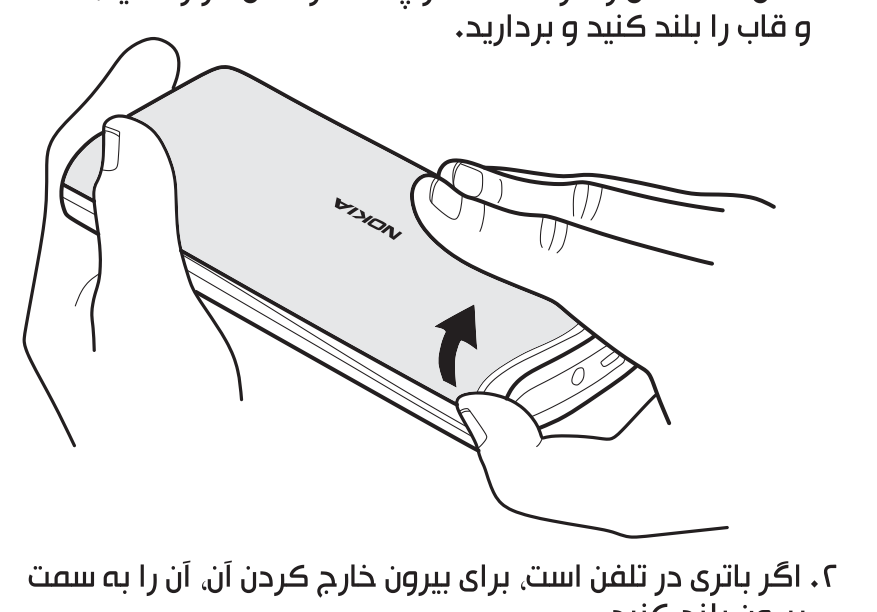

۲. اگر باتری در تلفن است، برای بیرون خارج کردن آن، آن را به سمت بیرون بلند کنید.
۳. سیم کارت را داخل شکاف سیم کارت قرار دهید.

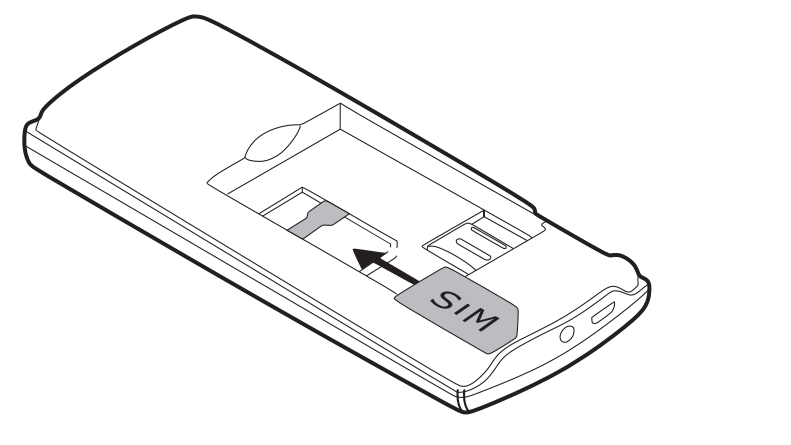

٤.اگر تلفن دو سیم کارته دارید، سیم کارت دوم را در شیار SIM2 بلغزانید. وقتی از دستگاه استفاده نمی کنید، هر دو سیم کارت به صورت همزمان در دسترس هستند، اما زمانیکه یکی از سیم کارتها فعال است، مثلاً در زمان برقراری تماس، سیم کارت دیگر ممکن است خارج از دسترس باشد.

نکته: برای اطلاع از امکان استفاده از دو سیم کارت در تلفنتان، برچسب روی جعبه فروش را ببینید. اگر دو شماره IMEI روی برچسب درج شده است، شما تلفن دو سیم کارته دارید.

٥.برای قرار دادن کارت حافظه نگهدارنده کارت حافظه را به سمت راست بلغزانید و آن را بالا ببرید کارت حافظه را در شکاف کارت حافظه بگذارید نگهدارنده را به سمت پایین ببندید و آن را به سمت چپ بلغزانید تا در جای خود قفل شود.

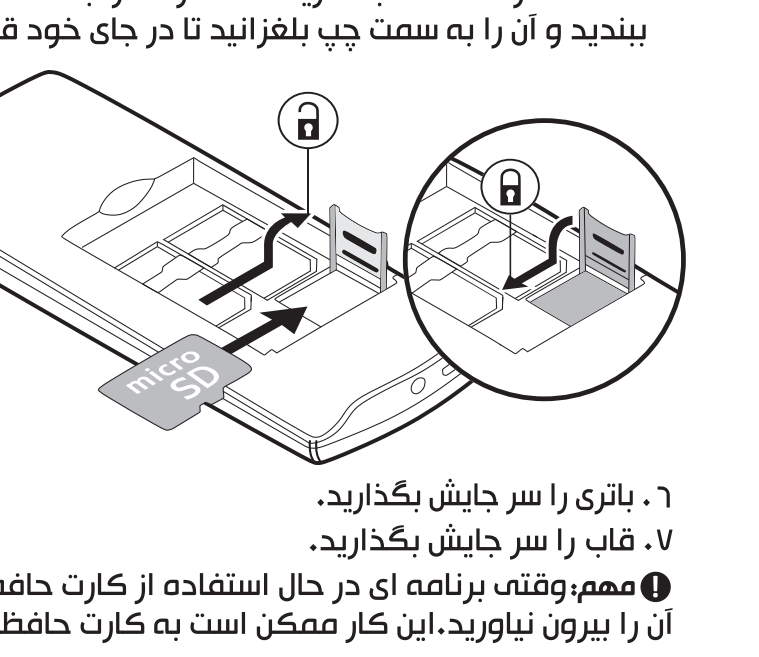

٦. باتری را سر جایش بگذارید.
۷. قاب را سر جایش بگذارید.
مهم:وقتی برنامه ای در حال استفاده از کارت حافظه است، آن را بیرون نیاورید.این کار ممکن است به کارت حافظه و دستگاه آسیب برساند و داده های ذخیره شده روی کارت را مخدوش کند.

روشن یا خاموش کردن تلفن
دکمه روشن/خاموش را فشار دهید و نگه دارید.

شارژ کردن باتری
۱. شارژر را به پریز دیواری وصل کنید.
۲. شارژر را به تلفن متصل کنید.پس از انجام این کار، شارژر را از تلفن و سپس از پریز دیواری جدا کنید.
اگر باتری کاملا تخلیه شده باشد، ممکن است چند دقیقه طول بکشد تا نشانگر شارژ نمایش داده شود.
دستگاه شما یك باتری قابل شارژ لیتیوم یون جداشدنی دارد. برای بیرون آوردن ایمن باتری، اطلاعات ایمنی را بخوانید.

برقراری تماس
۱ . شماره تلفن مورد نظر را تایپ کنید.
برای تایپ کردن نویسه + مورد استفاده برای تماس های بین المللی، * را دوبار فشار دهید.
۲.⌒را فشار دهید. اگر از شما خواسته شد، سیم کارت موردنظرتان را برای استفاده انتخاب کنید.
۳. برای پایان دادن به تماس، ◎ را فشار دهید.

پاسخ به تماس
⌒را فشار دهید.

ارسال پیام ها
۱.گزینه پیام ها>ایجاد پیام را انتخاب کنید.
۲.پیامتان را بنویسید.
۳. **گزینه > ارسال** را انتخاب کنید، و یک شماره تلفن را وارد یا گیرنده ای را از فهرست مخاطبین‌تان انتخاب کنید.
می توانید پیام های متنی طولانی تر از حد مجاز نویسه برای یك پیام ارسال کنید. پیام های طولانی تر به عنوان دو یا چند پیام ارسال خواهند شد. ارائه دهنده خدمات شما برهمین اساس هزینه را تعیین می کند. نویسه‌های دارای علامت تکیه، علامت های دیگر یا برخی گزینه های زبانی، فضای بیشتری اشغال می کنند و بنابراین تعداد نویسه هایی را که می توان در یك پیام واحد فرستاد کاهش می دهند.

پیدا کردن شماره مدل و شماره سریال (IMEI)
چنانچه لازم باشد با مرکز خدمات مشتری یا ارائه دهنده خدمات تماس بگیرید باید اطلاعاتی مانند شماره مدل و شماره سریال (IMEI) را ارائه دهید. برای مشاهده شماره مدل #0000*# را شماره گیری نمایید. برای مشاهده شماره سریال، #06#* را شماره گیری کنید.
اگر یک تلفن دو سیم کارته دارید، فقط IMEI1 لازم است. همچنین می توانید اطلاعات را روی برچسب تلفن خود بیابید، که در زیر باتری قرار گرفته است.
IMEI روی جعبه فروش اصلی نیز درج شده است.

اطلاعات ایمنی و محصول
برای مشاهده اطلاعات سیاست حفظ حریم خصوصی HMD Global، به www.nokia.com/phones/privacy بروید برای راهنمای کاربر آنلاین خاص محصول، دستور العمل های ایمنی، اطلاعات ضمانت و راهنمایی عیب یابی یا یافتن نزدیك ترین مرکز خدمات مجاز به www.nokia.com/mobile-support مراجعه کنید.

توجه: نرم افزار سیستم و برنامه‌های از پیش نصب شده بخش مهمی از فضای حافظه را اشغال می کنند.

خدمات و هزینه های شبکه
از دستگاهتان‌میتوانید در شبکه های GSM 1800و 900 مگاهرتز استفاده کنید به دریافت اشتراك ازارائه دهنده خدمات نیاز دارید.

حداکثر قدرت انتقال

GSM900	35 dBm
GSM1800	32 dBm

استفاده از برخی ویژگی ها و خدمات یا دانلود محتوا، شامل موارد رایگان، به اتصال شبکه نیاز دارد. این امر ممکن است باعث انتقال حجم زیادی از داده ها شود و در نتیجه هزینه برای شما در برداشته باشد. همچنین ممکن است لازم باشد در برخی از ویژگی ها‌مشترک شوید.

تماس های اضطراری
مهم: برقراری اتصال را در همه شرایط نمی توان تضمین کرد. هرگز نباید در ارتباطات ضروری از جمله فوریت های پزشکی تنها به ارتباط از طریق تلفن بی سیم اعتماد کرد.
قبل از برقراری تماس:
- تلفن را روشن کنید.
- اگرکلیدهای تلفن قفل هستند، آنها را باز کنید.
- به مکانی بروید که از قدرت سیگنال کافی برخوردار است.

۱. کلید پایان را چندین بار فشار دهید تا صفحه اصلی نشان داده شود.
۲. شماره تلفن اضطراری رسمی مکان فعلی خود را وارد کنید. شماره های تماس اضطراری در مکانهای مختلف فرق می کند.
۳. کلید تماس را فشار دهید.
٤. تا حد ممکن همه اطلاعات ضروری را به طور دقیق ارائه دهید. تا زمانی که اجازه قطع تماس داده نشده است، به تماس خاتمه ندهید.

همچنین ممکن است لازم باشد مراحل زیر را انجام دهید:
- سیم کارتی را در تلفن قرار دهید.
- اگر تلفن کدپین را درخواست می کند، شماره تلفن اضطراری رسمی مکان فعلی خود را وارد کنید و سپس کلید تماس را فشار دهید.
- محدودیت های تماس، نظیر انسداد تماس، شماره گیری ثابت یا گروه بسته کاربر را درتلفن همراه خود خاموش کنید.

نگهداری از دستگاه
با دستگاه، باتری ، شارژر و لوازم جانبی با احتیاط کار کنید.
پیشنهادهای زیر به شما کمك می کند که از دستگاه خود به درستی استفاده کنید.
- دستگاه را خشك نگه دارید. باران، رطوبت و هر نوع مایعات و نمناکی ممکن است حاوی مواد معدنی باشد که موجب خوردگی مدارهای الکترونیکی شود. اگر دستگاهتان خیس شد، باتری را بیرون بیاورید و بگذارید دستگاه خشك شود.
- دستگاه را در محیط های کثیف یا پر گرد و غبار قرار ندهید یا استفاده نکنید.
- دستگاه را در دمای بالا نگهداری نکنید. دماهای بالا ممکن است به دستگاه یا باتری آسیب برساند.
- دستگاه را در دمای سرد نگهداری نکنید. زمانی که دستگاه به دمای معمولی خود می رسد، در داخل دستگاه رطوبت ایجاد می شود که ممکن است به آن آسیب برساند.
- دستگاه را فقط به شیوه ای که در دفترچه راهنمای کاربر ذکرشده است باز کنید.
- تغییرات غیر مجاز ممکن است به دستگاه صدمه بزند و با قوانین ناظر بر دستگاه های رادیویی مطابقت نداشته باشد.
- از انداختن و پرتاب کردن، ضربه زدن یا تکان دادن شدید دستگاه یا باتری خودداری کنید. جابجایی خشن ممکن است باعث شکستن دستگاه شود.
- برای تمیز کردن سطح دستگاه فقط از پارچه نرم، تمیز و خشك استفاده کنید.
- دستگاه را رنگ آمیزی نکنید. رنگ آمیزی ممکن است مانع عملکرد درست دستگاه شود.
- برای برخورداری از عملکرد بهینه دستگاه، هر از گاهی آن را خاموش کنید و باتری را بیرون بیاورید.
- دستگاه را از آهنربا و میدان های‌مغناطیسی دور نگه دارید.
- برای حفظ ایمنی داده های مهم خود، آنها را حداقل در دو مکان جداگانه مانند دستگاه، کارت حافظه یا رایانه نگهداری کنید یا اطلاعات مهم را یادداشت کنید.

بازیابی تنظیمات اصلی
برای بازنشانی تلفن خود به تنظیمات اصلی آن و حذف همه داده های خود، در صفحه اصلی، #7370#* را تایپ کنید.

بازیافت
همیشه محصولات الکترونیکی، باتری ها و مواد بسته بندی را به مراکز جمع آوری اختصاصی بازگردانید. با این کار در پیشگیری از دفع غیر قابل کنترل زباله و همچنین بهبود بازیافت مواد کمك خواهید کرد. محصولات الکتریکی و الکترونیکی حاوی چندین ماده با ارزش از قبیل فلزاتی (همچون مس، آلومینیوم، استیل، و منیزیم) و فلزات قیمتی (از قبیل طلا، نقره، و پالادیوم) هستند. همه مواد به کار رفته در این دستگاه به صورت مواد و انرژی قابل بازیافت است.

نماد سطل زباله چرخ دار ضربدر خورده
نماد سطل زباله چرخدار ضربدر خورده بر روی محصول، باتری، دفترچه ها یا بسته بندی آن به شما یادآور می شود که کلیه محصولات الکترونیکی و الکتریکی و باتری ها، پس از تمام شدن عمر مفیدشان باید به انبار جداگانه ای انتقال یابند. یادتان باشد که ابتدا داده های شخصی را از روی دستگاه حذف کنید. این محصولات را نباید مانند زباله های شهری تفکیك نشده دور انداخت؛ آنها را برای بازیافت تحویل دهید. برای کسب اطلاعات در مورد نزدیك ترین نقطه بازیافت به شما، این مورد را با مسئولین بازیافت محلی خود بررسی کنید یا در مورد برنامه بازپس گیری HMD و موجودیت آن در کشور خود در .www.nokia.com/phones/support/topics/recycle مطالعه کنید.

اطلاعات مربوط به باتری و شارژر
در دستگاه خود،فقط از باتری قابل شارژ اصلی BL-L5J استفاده کنید. دستگاه‌تان را با شارژرAC-18 شارژ کنید. نوع دوشاخه شارژرممکن است متفاوت باشد.HMD Global ممکن است مدل های باتری یا شارژر دیگری را برای این‌دستگاه ارائه دهد.

ایمنی باتری و شارژر
وقتی شارژ دستگاه‌تان تکمیل شد، شارژر را از دستگاه و پریز برق جدا کنید. لطفا توجه کنید که شارژ پیوسته نباید بیش از ۱۲ ساعت طول بکشد. اگر باتری کاملا شارژشده بی‌استفاده بماند، شارژ آن پس از مدتی تخلیه میشود. همیشه برای عملکرد بهینه دمای باتری را بین15تا 25 درجه سانتیگراد (59 تا 77 درجه فارنهایت) نگه دارید. دماهای خیلی زیاد موجب کاهش ظرفیت و عمر باتری می شود. وقتی باتری گرم یا سرد باشد، ممکن است دستگاه به طور موقت کار نکند.
قوانین محلی را رعایت کنید. درصورت امکان باتری را بازیافت کنید. آن را مانند زباله خانگی دور نیندازید.
باتری را در معرض هوا با فشار بسیار پایین قرار ندهید یا در دمای بیش ازحد بالا رها نکنید، برای مثال در آتش نیندازید، زیرا ممکن است باعث شود باتری منفجر شود یا مایع یا گاز قابل اشتعال از آن نشت کند.
از جدا کردن، بریدن، خرد کردن، خم کردن، سوراخ کردن یا آسیب رساندن به باتری خودداری کنید. در صورتی که باتری نشتی دارد، اجازه ندهید مایع باتری با پوست یا چشم تماس یابد. در صورت تماس، فوراً قسمت های مربوطه را با آب فراوان بشوئید یا به پزشك مراجعه کنید. از دستکاری باتری یا وارد کردن یك جسم خارجی در آن جلوگیری کنید یا آن را در آب یا مایعات دیگر فرو نکنید یا در معرض آنها قرار ندهید. اگر باتری آسیب دیده باشد ممکن است منفجر شود.
از باتری و شارژر فقط برای مقاصد تعیین شده استفاده کنید. استفاده نامناسب یا استفاده از باتری ها و شارژرهای تایید نشده یا ناسازگار ممکن است باعث خطر آتش سوزی، انفجار یا خطرات دیگر شود و تأییدیه یا ضمانت شما را بی اعتبار کند. اگر فکر می کنید باتری یا شارژر آسیب دیده است، قبل از استفاده مجدد، آن را نزد یك مرکز سرویس یا فروشنده تلفنتان ببرید. هرگز از شارژر یا باتری آسیب دیده استفاده نکنید. ازشارژرفقط در داخل ساختمان استفاده کنید. هنگام رعد و برق، دستگاه را شارژ نکنید.
برای جدا کردن شارژر یا وسیله جانبی از پریز، دوشاخه را بگیرید و بکشید و از کشیدن سیم خودداری کنید.
علاوه براین، اگر باتری دستگاه شما جداشدنی باشد، موارد زیر صدق می کند:
- قبل از خارج کردن باتری، همیشه دستگاه را خاموش کنید و شارژر را از برق بکشید.
- زمانی که جسمی فلزی با نوارهای فلزی روی باتری تماس پیدا کند ممکن است اتصال کوتاه اتفاق رخ دهد. این اتفاق ممکن است به باتری یا قطعات دیگر آسیب برساند.

کودکان خردسال
این دستگاه و لوازم جانبی آن اسباب بازی نیستند. این وسایل ممکن است دارای قطعات کوچك باشند. آنها را دور از دسترس بچه های کوچك نگهدارید.

دستگاه های پزشکی
عملکرد تجهیزات مخابره امواج رادیویی ، از جمله تلفن های بی سیم ممکن است در عملکرد دستگاه های پزشکی که از محافظ مناسب برخوردار نیستند اختلال ایجاد کنند. برای تعیین اینکه آیا دستگاه در برابر انرژی رادیویی خارجی از محافظ مناسبی برخوردار است یا خیر، با پزشك یا سازنده دستگاه پزشکی خود مشورت کنید.

دستگاه های پزشکی کار گذاشته شده در بدن
تولیدکنندگان دستگاه های پزشکی کارگذاشته شده در بدن (مانند ضربان ساز قلب، پمپ های انسولین و محرك های عصبی)، برای جلوگیری از تداخل احتمالی، حداقل فاصله15,3سانتی متری (6اینچ) را بین دستگاه بی سیم و دستگاه پزشکی توصیه می کنند. افرادی که چنین دستگاه هایی دارند باید:
- همیشه دستگاه بی سیم را بیشتر از 15,3 سانتی متر (6اینچ) ازدستگاه پزشکی دور نگه دارند.
- دستگاه بی سیم را در جیب روی سینه حمل نکنند.
- دستگاه بی سیم را نزدیك به آن گوش خود نگه دارند که در جهت مخالف دستگاه پزشکی قرار دارد.
- اگر به هر دلیل مشکوك به تداخل الکترونیکی‌هستند، دستگاه بی سیم را خاموش کنند.
- از دستورالعمل های سازنده دستگاه پزشکی کار گذاشته شده پیروی کنند

اگر در مورد استفاده از دستگاه بی سیم خود به همراه دستگاه پزشکی کار گذاشته شده سؤالی دارید با مشاور پزشکی خود مشورت کنید.

شنوایی
هشدار: هنگام استفاده از هدست، توانایی شما برای شنیدن صداهای خارجی‌ممکن است تحت تأثیر قرار گیرد. در جایی که ممکن است استفاده از هدست ایمنی شما را به مخاطره بیاندازد، از آن استفاده نکنید.
بعضی از دستگاه های بی سیم ممکن است در کار برخی سمعك ها اختلال ایجاد کنند.

نیکل
سطح این دستگاه فاقد نیکل است.

خودروها
سیگنال های رادیویی ممکن است بر سیستم های الکترونیکی فاقد محافظت کافی در خودروها یا سیستم هایی که به درستی نصب نشده اند تأثیر بگذارد. برای کسب اطلاعات بیشتر با سازنده دستگاه یا تجهیزات آن تماس بگیرید.
فقط اشخاص مجاز باید دستگاه را در وسیله نقلیه نصب کنند. نصب نادرست ممکن است خطرناك باشد و ضمانت شما را از اعتبارساقط کند. مرتبا بررسی کنید که همه تجهیزات دستگاه بی سیم به درستی در وسیله نقلیه نصب شده و کار می کنند. از ذخیره یا حمل مواد قابل اشتعال یا انفجاری در محفظه ای که دستگاه، قطعات یا لوازم جانبی آن قرار دارد بپرهیزید. دستگاه یا لوازم جانبی خود را درمحلی روی کیسه هوا یا در ناحیه استقرار کیسه هوا قرار ندهید.

محیط های قابل انفجار بالقوه
دستگاه تان را در مکان هایی که خطر انفجار وجود دارد مثلا در نزدیکی پمپ های بنزین خاموش کنید. جرقه ها ممکن است باعث ایجاد انفجار یا آتش سوزی و حتی منجر به جراحت و مرگ شوند. در مناطق نفتی، تأسیسات شیمیایی یا مناطقی که عملیات انفجار در حال انجام است به محدودیت ها توجه کنید. مناطقی که دارای محیط قابل انفجار هستند ممکن است به وضوح مشخص نشده باشند. این مناطق معمولاًمکان هایی هستند که به شما توصیه می شود موتور ماشین خود را خاموش کنید، در زیر عرشه کشتی ها، تجهیزات انتقال مواد شیمیایی یا تأسیسات ذخیره آنها و مکان هایی که هوا در آنها حاوی ذرات و مواد شیمیایی است. با سازندگان خودروهایی که از گاز مایع (مانند پروپان یا بوتان) استفاده می کنند. درباره میزان ایمنی استفاده از این دستگاه در مجاورت چنین مواردی مشورت کنید.

اطلاعات گواهی (SAR)
این دستگاه تلفن همراه، دستورالعمل های قرارگیری در معرض امواج رادیویی را که توسط شورای اروپا(CE) اتخاذ شده است رعایت می کند. به موارد زیر مراجعه کنید.
اطلاعات مربوط به قرارگیری در معرض امواج رادیویی اروپا
دستگاه تلفن همراه شما یك فرستنده و گیرنده رادیویی است. این دستگاه تلفن همراه به گونه ای طراحی شده است که از میزان محدودیت های قرارگیری در معرض امواج رادیویی که توسط دستورالعمل های بین‌المللی توصیه شده، فراتر نرود. این دستورالعمل ها توسط سازمان علمی مستقل ICNIRP ارائه شده است و دارای نکات ایمنی است که به منظور اطمینان یافتن از محافظت تمامی افراد بدون توجه به سن و وضعیت سلامتی آنان طراحی شده است. این دستورالعمل ها از یك واحداندازه گیری به نام میزان جذب خاص یا SAR استفاده می کنند. محدوده SAR برای دستگاه های همراه 2.0 وات بر کیلوگرم و بالاترین مقدارSAR برای این دستگاه هنگام آزمایش روی گوش 0.558 وات بر**کیلوگرم** * است. ازآنجاکه دستگاه‌های تلفن همراه طیفی ازعملکردها ارائه می دهند، می توان از آنها در موقعیت های دیگری مثلا روی بدن استفاده کرد. در این صورت بالاترین میزان SAR آزمایش شده **1.023 وات بر کیلوگرم*** در فاصله ای برابر با 0.5 سانتیمتر از بدن است. برای ایمنی الکترونیکی، فاصله را با لوازم جانبی فاقد فلز حفظ کنید، به طوری که فاصله گوشی با آن حداقل برابر با فاصله فوق باشد. استفاده از لوازم جانبی دیگر ممکن است رعایت دستورالعمل های قرارگیری در معرض امواج رادیویی راتضمین نکند.
*این آزمایش ها مطابق با دستور العمل های بین المللی آزمایش انجام می شود.

درباره مدیریت حقوق دیجیتالی
هنگام استفاده از این دستگاه همه قوانین را رعایت کنید و به عرف اجتماعی، حریم شخصی و حق قانونی دیگران از جمله حق نسخه برداری احترام بگذارید. حفاظت از حق نسخه برداری شما را از کپی تصحیح یا انتقال عکس ها، موزیك و سایر محتواها منع می کند.

حق نسخه برداری و سایر اعلامیه ها

بیانیه انطباق اتحادیه اروپا
بدین وسیله، HMD Global oy (Ltd.) اعلام می کند که این محصول با شرایط لازم و دیگر مقررات مربوط به مصوبه EU/2014/53 انطباق دارد. یك کپی از بیانیه انطباق اتحادیه اروپا را می توانید در آدرس https://www.nokia.com/en_int/phones/declaration-of-conformity. پیدا کنید.
سازنده و یا وارد کننده در اتحادیه اروپا HMD Global Oy، Bertel Jungin aukio 9، Espoo 02600 , Finland
سیاست حریم خصوصی HMD Global موجود در https://www.nokia.com/phones/privacy بر استفاده شما از این دستگاه اعمال میشود.
©2023 HMD Global. HMD Global Oy صاحب امتیاز انحصاری برند Nokia برای تلفن و رایانه های لوحی است. Nokia یك علامت تجاری ثبت شده متعلق به Nokia Corporation است
این محصول شامل نرم افزار منبع آزاد است. برای حق نسخه برداری و سایر اعلامیه ها، مجوزها و اطلاعیه های قابل اجراء #6774#* را در صفحه اصلی انتخاب کنید.

ضمانت محدود سازنده

۱. موارد کلی
HMD Global Oy.(از این پس سازنده») این ضمانت محدود سازنده «ضمانت» یا Warranty(را برای هر «دستگاه اصلی محصول») و لوازم جانبی مربوطه یا (طبق تعریف موجود در بخش ۲) که در بسته فروش محصول گنجانده شده باشد ارائه میکند.
این ضمانت فقط در کشوری که محصول از طریق کانال های فروش مجاز سازنده خریداری شده است، قابل اجرا است البته به شرط اینکه محصول برای فروش در آن کشور تحت پوشش در نظر گرفته شده باشد. خدمات ضمانت موجود در هر کشور یا منطقه تحت پوشش خاصی ممکن است محدود به محصولات و عناصر خاص آن کشور موجود برای فروش در آن کشور یا منطقه تحت پوشش باشد.
این ضمانت شامل هرگونه حقوق قانونی تحت هرگونه قوانین حمایت از مصرف کننده کشور تحت پوشش مربوط به شما می شود و آنها را پوشش میدهد و همچنین به شما حقوق خاص و در صورت لزوم حقوق دیگری را تاجایی که چنین قانونی مجاز بداند اعطا می کند. این ضمانت حقوق ممکن شما تحت قانون قابل اجرا را محدود نمی کند، و شما ممکن است در طول دوره ضمانت یا پس از آن براساس قوانین محلی حقوق دیگری نیز داشته باشید. این حقوق را در ضمانت نامه نمی توان نادیده گرفت. از محصول و لوازم جانبی آن باید طبق دستور العمل های ارائه شده در دفترچه ها و راهنماهای کاربر موجود در بسته محصول استفاده شود که به طور آنلاین هم در دسترس است. سازنده ممکن است هرازگاهی پوشش ضمانت تکمیلی ارائه دهد که کامل کننده شرایط بیان شده در اینجا است.
برای کسب اطلاعات بیشتر در مورد محصول شما و هرگونه پوشش تکمیلی آن، لطفا از www.nokia.com/mobile-support بازدید کنید

۲.ضمانت (Warranty)
مدت ضمانت از تاریخ نخستین فروش محصول به کاربر نهایی شروع می شود که در مدرك اصلی خرید مشخص است.
الف. سازنده تضمین میکند که‌محصول (شامل باتری های غیر قابل تعویض توسط کاربر) خریداری شده در کشور یا منطقه تحت پوشش، از لحاظ مواد و ساخت برای دوره زمانی دوازده (۱۲) ماه عاری از هرگونه نقص («نقص») باشد، به جز محصولات خریداری شده در کشورها و مناطق تحت پوشش زیر که در آنجا دوره ضمانت بیست و چهار (۲٤) ماه است:
استرالیا، کشورهای عضو اتحادیه اروپا، ایسلند، لیختن اشتاین، مولداوی مونته نگرو، نیوزلند، مقدونیه شمالی،نروژ،عربستان سعودی، صربستان سوئیس، و ترکیه و بریتانیا.
ب. سازنده تضمین میکند که لوازم جانبی تعریف شده به عنوان باتری قابل تعویض توسط کاربر، جلد،کابل،شارژر ، هدست و هرگونه لوازم جانبی دیگری که در بسته فروش قرار دارد به مدت شش (٦) ماه در کشور یا منطقه تحت پوشش عاری از «نقص» باشد.
در مدت ضمانت هرگونه «نقص تحت پوشش این ضمانت در مدت زمانی معقول و بدون دریافت هزینه با تعمیر یا تعویض محصول یا لوازم جانبی معیوب یا بخش معیوب آن به عنوان یکی از گزینه ها، رفع خواهد شد
به شرط آنکه محصول یا لوازم جانبی معیوب را پیش از انقضای دوره ضمانت به فروشنده اصلی یا سازنده یا مرکز سرویس مجاز آن که هر چند وقت یك بار تعیین میشود بازگردانده باشید.
هنگام تعمیر یا تعویض محصول یا لوازم جانبی شما، سازنده ممکن است از قطعات جدید یا تعمیر شده استفاده کند یامحصول یا لوازم جانبی جایگزین بازسازی شده ارائه دهد، به جز در مواردی‌که استفاده از این قطعات تعمیر شده یا محصول یا لوازم جانبی بازسازی شده طبق قانون محلی ممنوع باشد. چنانچه طبق قانون محلی کاربر نهایی باید از استفاده از قطعات تعمیر شده یا محصولات و لوازم جانبی بازسازی شده مطلع شود، این ضمانت به عنوان اعلان لازم در این خصوص قلمداد می شود.
در صورتی‌که طبق قانون محلی رضایت کاربر نهایی برای استفاده از قطعات تعمیر شده یا محصولات یا لوازم جانبی بازسازی شده لازم باشد، تا زمانی که این رضایت حاصل نشود از این قطعات یا محصولات یا لوازم جانبی استفاده نخواهد شد.
هنگام طرح ادعا براساس ضمانت، شما باید فاکتور خرید اصلی و خوانا که به طور واضح نام و نشانی فروشنده، مکان و زمان خرید، نوع محصول و شماره سریال را نشان دهد، همراه با محصول یا لوازم جانبی معیوب به فروشنده اصلی (یاسازنده یا مرکز سرویس مجاز آن که، هر چند وقت یك بار تعیین می شود) ارائه دهید. تا جایی که قانون قابل اجرا اجازه دهد:
(ا)هیچگونه تعمیر یا تعویضی موجب تجدید یا تمدید دوره ضمانت اصلی نخواهد شد، مگر اینکه این تجدید یا تمدید طبق قانون محلی الزام شده باشد که در این صورت دوره ضمانت تا حداقل زمان ملزم شده از سوی قانون تمدید می شود:
(۲) برای کشورهایی که چنین تجدید یا تمدیدی طبق قانون محلی الزام نشده باشد،محصول اصلی،قطعات تعویضی یا محصولات یا لوازم جانبی تعویضی که تحت این ضمانت ارائه شده اند برای دوره باقی مانده از ضمانت اصلی یا به مدت شصت (٦٠) روز از تاریخی که محصول یا لوازم جانبی تعمیر شده یا تعویضی به شما برگردانده شده است هر کدام که بیشتر باشد،تحت این ضمانت پوشش داده خواهد شد؛ و
(۳) چنانچه محصول، لوازم جانبی یا قطعاتی از محصول یا لوازم جانبی تعویض شود محصول قطعات یا محصول یا لوازم جانبی اصلی دارایی سازنده یا خرده فروش محسوب میشود.
لطفا همیشه قبل از ارائه محصول خودتان برای سرویس، از تمام داده های شخصی، نرم افزارها، برنامه ها و محتوای ذخیره شده در محصول نسخه پشتیبان تهیه کنید ، و آنها را حذف کنید، زیرا فعالیت های تعمیراتی تمام داده ها را از روی محصول شما پاك میکند. اگر محصول شما تعویض شود، داده ها، نرم افزارها، برنامه ها و محتوای ذخیره شده در محصول شما به محصول جایگزین منتقل نخواهد شد. پیش از ارسال محصول خود برای سرویس، هرگونه اطلاعات محرمانه را از روی آن پاك کنید. سازنده، مراکز سرویس مجاز و خرده فروش ها در قبال از دست رفتن داده ها، نرم افزارها، برنامه ها یا محتوای شما مسئولیتی ندارند.

۳. مواردی که این ضمانت پوشش نمی دهد
این ضمانت هیچ یك از موارد زیر را شامل نمی شود:
(ا) خطاها یا خرابی های ناشی از:
(الف) قرار گرفتن در معرض مایعات یا رطوبت (مگر اینکه محصول در شرایط خاصی چنان که سازنده مشخص کرده است ضد آب اعلام شده باشد)، خرابی ناشی از قرار گرفتن در معرض میدان الکترومغناطیسی قوی (مانند صدمات وارد شده توسط مایکروویو)، یا شرایط محیطی یا گرمایی شدید، یا تغییرات سریع در چنین شرایطی، خوردگی،زنگ زدگی، ریختن مایعات یا غذا یا تأثیر محصولات شیمیایی؛
(ب) آسیب فیزیکی ترک تورفتگی یا خراش ناشی از افتادن یا نیروهای خارجی که بر محصول یا هر یك از قطعات محصول تأثیر گذاشته باشد، از جمله و نه محدود به بدنه نمایشگر لنزهای دوربین، و دکمه ها (مگر اینکه سازنده در شرایط خاصی چیزی مغایر با این مشخص کرده باشد)؛
(پ)استفاده از محصول همراه با،یا متصل کردن آن به،هر محصول،لوازم جانبی نرم افزار یا سرویسی که سازنده تولید یا عرضه نکرده باشد یا مجوز آن را نداده باشد، یا رابط برق کابل دیتا، یا شارژرهایی که مشخصات فنی و ایمنی ضروری مشروح در راهنمای کاربر را نداشته باشند.
(ت) هرگونه محصول شخص ثالثی که همراه با محصول شما فروخته شده باشد؛
(ث) خرابی یا خطاهای ایجاد شده توسط هك، کرك ویروس یا سایر بدافزارها یا توسط دسترسی غیر مجاز به سرویس ها، حساب ها، سیستم های کامپیوتری یا شبکه ها؛
(ج) قطع برق یا اضافه ولتاژهای بزرگ که‌می توانند براستفاده عادی از محصول تأثیر بگذارند، یا
(چ) سایر عملکردهای فراتر از کنترل منطقی سازنده.
(۲) هرگونه سایش و پارگی
(۳) استفاده از محصول به طوری که با عملکرد در نظر گرفته شده برای آن و مقررات راهنمای کاربر مطابقت نداشته باشد؛
(٤) اگر محصول شما توسط اشخاص ثالث غیر مجاز باز، اصلاح، یا تعمیر شده باشد، یا از قطعات یدکی غیر مجاز برای تعمیر استفاده شده باشد؛
(٥) اگر جدیدترین به روزرسانی‌های نرم افزار را که به صورت عمومی برای محصول شما در دسترس قرار گرفته است در مدتی منطقی پس از تاریخ عرضه آن نصب نکرده باشید.
سازنده ضمانت نمی کند نرم افزاری که از قبل توسط سازنده یا از طرف آن یا به روزرسانی و ارتقاهای بعدی به طور کلی «نرم افزار سازنده») در محصول نصب شده است نیازهای شما را برآورده کند، با سخت افزار یا نرم افزاری که توسط سازنده ارائه نشده است کار کند بدون وقفه و عاری از خطا باشد یا خطاها قابل رفع باشد یا رفع شود. در خصوص خطاهای مربوط به نرم افزار سازنده میتوان گفت که سازنده جدیدترین نسخه نرم افزار سازنده را برای نصب مجدد در محصول ارائه می دهد یا اگر این کار امکان پذیر نباشد، بنا به صلاحدید سازنده تدبیر دیگری برای حل مشکل اندیشیده میشود. برخی از نرم افزارهای سازنده ممکن است مشمول شرایط مجوز دیگری شوند که همراه با نرم افزار ارائه می شود.
این ضمانت خارج از کشور یا منطقه تحت پوشش معتبر نیست و موارد زیر را پوشش نمی دهد: (الف) راهنماهای کاربر (ب)) هرگونه نرم افزار شخص ثالث، تنظیمات، محتوا، داده ها یا پیوندهای نصب شده یا بارگیری شده روی محصول شما در هر زمان یا سرویس های سازنده و شخص ثالث یا سرویس گیرنده های فعال کننده حتی اگر از قبل توسط سازنده نصب شده باشند لطفا شرایط و ضوابطی را که همراه سرویس ها ارائه می شوند مطالعه کنید چون حقوق و تکالیف شما را تعریف می کند؛ (پ) کاهش ظرفیت شارژ باتری در نتیجه پایان عمر طبیعی محصول، یا عیوب پیکسلی در نمایشگر محصول شما که در محدوده استانداردهای این صنعت باشد.
و (ت) سیم کارت و یا هرگونه شبکه تلفن همراه یا دیگر یا سیستمی که محصول شما در آن کار می کند؛ و (ث) هر محصولی که شماره سریال، کد تاریخ لوازم جانبی تلفن همراه یا شماره IMEI آن حذف پاك یا مخدوش شده یا تغییر یافته باشد یا این اطلاعات آن به هر نحو دیگری ناخوانا باشد.
اگر از برگرداندن محصول یا لوازم جانبی به فروشنده اصلی یا سازنده برای بررسی آن خودداری کنید نمیتوانید این ضمانت را اعمال کنید.
اگر این ضمانت طبق توضیحات بالا محصول یا لوازم جانبی شما را پوشش نمیدهد خرده فروش، سازنده، یا مرکز سرویس مجاز آن حق دارد پس دریافت رضایت شما در ازای تعمیر یا تعویض محصول یا لوازم جانبی شما و همچنین برای کارمزد، هزینه دریافت کند.

٤.محدودیت در تعهد سازنده
تا حداکثر میزانی که قانون (های) قابل اجرا اجازه می دهد، سازنده تحت هیچ شرایطی هیچ گونه مسئولیتی، چه به صورت صریح و چه به صورت ضمنی، برای هیچ یك از موارد زیر برعهده نمی گیرد:
(۱) خرابی یا ضرر از هر نوع در نتیجه از دست دادن، آسیب دیدن یا خراب شدن محتوا یا داده ها یا بازتولید یا انتقال آنها حتی اگر این از دست دادن آسیب یا خرابی در نتیجه نقصی در محصول یا لوازم جانبی شما ایجاد شده باشد؛ و یا/
(۲) از دست دادن سود، کاربری، بهره وری، کسب و کار، قراردادها، درآمدها یا، پس اندازهای پیش بینی شده افزایش هزینه ها و مخارج، یا برای هرگونه خرابی یا ضرر غیر مستقیم، تبعی یا خاص.
تا حداکثر میزانی که قانون (های) قابل اجرا اجازه دهد، سازنده به میزان ارزش خرید محصول یا لوازم جانبی شما، هر کدام که صدق کند، محدود خواهد شد.

۵. سایر اعلامیه های مهم
سازنده حق ایجاد هرگونه تغییر در مکان یا دسترس پذیری شبکه مراکز سرویس مجاز خویش را در هر زمان برای خود محفوظ می دارد.
ممکن است محصول شما دارای عناصر خاصی باشد که اگر خارج از کشور اصلی محل خریداری استفاده شوند به شکل مورد انتظار کار نکنند.

٦.مفاد تکمیلی ضمانت برای محصولات و لوازم جانبی خریداری شده در استرالیا و نیوزلند
استرالیا. محصول ما دارای شرایط ضمانتی است که طبق قانون مصرف کنندگان استرالیا نمیتوان آنها را کنار گذاشت. در صورت بروز خرابی جدی، شما حق دریافت محصول جایگزین یا استرداد مبلغ خرید را به علاوه مبلغی برای جبران هرگونه زیان یا آسیب دیگری که منطقاً قابل پیش بینی‌باشد دارید. چنانچه محصول ، کیفیت قابل قبولی نداشته باشد و این موضوع خرابی جدی به حساب نیاید، شما حق دارید محصول تعمیر یا تعویض شود.
پشتیبانی در این نشانی در دسترس است.
www.nokia.com/mobile-support
شماره تماس: +61730628463
نیوزلند. محصول ما دارای شرایط ضمانت مصرف کننده ای است که طبق قانون ضمانت نامه های مصرف کنندگان 1993 (نیوزلند) نمی توان آنها را کنار گذاشت. در صورت بروز خرابی قابل توجه شما حق دریافت محصول جایگزین یا استرداد مبلغ خرید را به علاوه مبلغی برای جبران هرگونه زیان یا آسیب که منطقاً قابل پیش بینی باشد دارید. چنانچه محصول کیفیت قابل قبولی نداشته باشد و این موضوع خرابی قابل توجه به حساب نیاید، شما حق دارید محصول تعمیر یا تعویض شود. چنانچه محصول برای اهداف تجاری به شما عرضه شده باشد، شرایط ضمانت مصرف کننده طبق قانون ضمانت نامه های مصرف کنندگان ۱۹۹۳ (نیوزلند) صدق نمی کند.
پشتیبانی در این نشانی در دسترس است
www.nokia.com/mobile-support.
شما باید محصول را با هزینه خودتان به مرکز سرویس مجاز سازنده ارسال کنید. اگر برای دریافت خدمات تحت این ضمانت به مرکز سرویس مجاز سازنده مراجعه کردید، لطفاً به یاد داشته باشید رونوشتی از فاکتور خرید اصلی، که باید به صورت واضح کلمات « فاکتورمالیات» یا نوشته ای مشابه آن داشته باشد و شامل نام و شماره ABN فروشنده (برای استرالیا) یا شماره GST فروشنده (برای نیوزلند)، تاریخ خرید، شرحی از محصول خریداری شده و IMEI یا شماره سریال دیگر محصول باشد را همراه داشته باشید

آدرس سازنده: HMD Global Oy، Bertel Jungin aukio 9، Espoo 02600، Finland